GB - AWE 6528 GG

PROGRAMME CHART

A. Programme selector
B. "Temperature" button
C. Temperature display
D. "Variable spin" button
E. "Start delay" button
F. Time display
G. "Start(Pause)" button

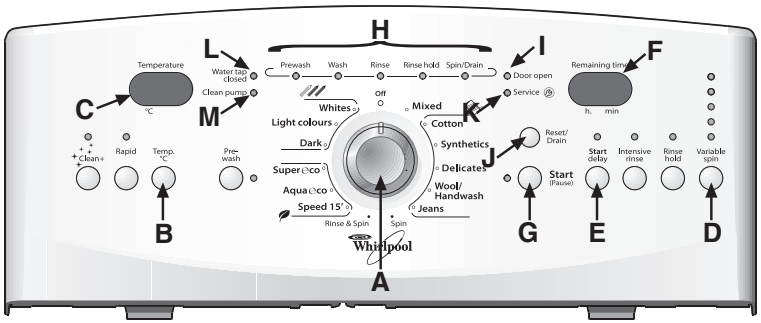

H. Programme sequence indicator
I. "Door open" indication
J. "Reset/Drain" button

This washing machine is equipped with automatic safety functions which detect and diagnose faults at an early stage and react appropriately:

K. "Service" indication
L. "Water tap closed" indication
M. "Clean filter" indication

Programme		Tempe-rature	Care Labels	Max. Load kg	Type of wash / Notes *- Respect the manufacturer's recommendations on the care label*	Detergents and additives			Options						Spin	
						Pre-wash	Main wash	Softener	Clean +	Rapid	Pre-wash	Start delay	Intensive rinse	Rinse hold	Variable Spin	Max spin speed rpm
Mixed		*20 - 60°C*	60 40 60 40	3.0	**Slightly to normally soiled robust laundry made of cotton, linen, artificial fibres and their blends.** *Effective one-hour programme. Make sure to wash only similar colours together in one wash load. If soil level requires, add oxygen-based stain removers.*	–	Yes	❊	–	–	–	❊	❊	❊	❊	Max.
Fabrics	**Cotton**	*20 - 95°C*	95 60 40 30	6.0	**Normally to heavily soiled towels, underwear, table and bed linen etc. made of cotton and linen.**	❊	Yes	❊	❊	❊ 2)	❊	❊	❊	❊	❊	Max.
Fabrics	**Synthetics**	*20 - 60°C*	60 40 30	3.0	**Normally soiled blouses, shirts, overalls, etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.**	❊	Yes	❊	❊	❊	❊	❊	❊	❊	❊	Max.
Fabrics	**Delicates**	*20 - 40°C*	40 30	1.5	**Curtains and delicate clothing, dresses, skirts, shirts and blouses.**	❊	Yes	❊	–	–	❊	❊	–	❊	❊	1000 1)
Fabrics	**Wool / Handwash**	*20 - 40°C*	Woolmark	1.0	**Woolens, labelled with the Woolmark and identified as machine washable, as well as textiles made of silk, linen, wool and viscose marked as handwashable.** This programme is tested and approved by The Woolmark Company for machine- and handwashable wool. Select spin speed according to the manufacturer's recommendation on the care label.	–	Yes	❊	–	–	–	❊	–	❊	❊	1000 1)
Fabrics	**Jeans**	*20 - 60°C*	60 40	5.0	**Normally soiled cotton jeanswear and garments made of jeanslike material such as trousers and jackets.**	❊	Yes	❊	❊	❊	❊	❊	–	❊	❊	Max.
Colours	**Whites**	*20 - 60°C*	60 40 30	6.0	**Normally to heavily soiled and robust cotton laundry.** Save energy by selecting a lower wash temperature and adding an oxygen-based bleach product, in addition to your detergent	–	Yes	❊	–	–	–	❊	❊	❊	❊	Max.
Colours	**Light colours**	*20 - 60°C*	60 40 30	4.0	**White and pastel shaded garments made of delicate fabrics.** Gentle wash programme to avoid graying or yellowing of your laundry. Use heavy duty detergent, if necessary also stain removers or bleaches on oxygen basis. Do not use liquid detergent.	❊	Yes	❊	–	–	❊	❊	–	❊	❊	1000 1)
Colours	**Dark**	*20 - 60°C*	60 30 60 30	4.0	**Black and dark garments made of cotton, cotton blends and polyester.** Special programme to reduce colour fading and local discolouration. Prefer to use a liquid detergent for dark garments with this programme.	❊	Yes	❊	–	–	❊	❊	–	❊	❊	Max.
Economy	**Super eco**	*20 - 60°C*	95 60	6.0	**Normally to heavily soiled and robust underwear, table and bed linen, towels and shirts made of cotton and linen.** Offers highest economy in energy consumption by prolonged washing duration. Ideal to be run overnight to additionally profit from the more favourable energy rates. To avoid noise of spinning at night, set spin speed to "0" and start spin programme in the morning, or define programme start with "Start delay" accordingly.	–	Yes	❊	–	–	–	❊	❊	❊	❊	Max.
Economy	**Aqua eco**	*20 - 40°C*	40 30 40 30	2.5	**Lightly soiled laundry made of synthetic fibres, or synthetics mixed with cotton garments.** Saving programme with a very low water consumption. Use liquid detergent and the lowest recommended amount for 3kg laundry. Do not use softener.	–	Yes	–	–	–	–	❊	–	❊	❊	Max.
Economy	**Speed 15'**	*20 - 30°C*	30 30	3.0	**Briefly worn clothing made of cotton, artificial fibers and blends with cotton.** Refresh programme. Use lowest recommended detergent amount.	–	Yes	❊	–	–	–	❊	–	❊	❊	Max.
Spin		-	-	6.0	**In this programme spinning is intensive. Same as the spin cycle in the "Cotton" programme.**	–	–	–	–	–	–	❊	–	–	❊	Max.
Rinse & Spin		-	-	6.0	**Rinse and intensive spin programme.** *Same as the last rinse and the final spin in the "Cotton" programme.*	–	–	❊	–	–	–	❊	❊	❊	❊	Max.

❊: optional / Yes : dosing required
1) For improved garment care, spin speed is restricted in these programmes.
2) Selectable for programmes Cotton 60 and 40°C only.

The wool and handwash cycles of this machine have been tested and approved by The Woolmark Company for the washing of Woolmark garments labelled as "machine wash" or "hand wash"provided that the garments are washed according to the instructions on the garment label and those issued in this programme chart.

M0703

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 11081

CONSUMPTION DATA

Programme	Temperature (°C)	Load (kg)	Water (l)	Energy (kWh)	Approx Programme Duration ⏲ (hours : minutes)	
					without "Rapid"	with "Rapid"
Mixed	40	3.0	40	0.45	1:00	–
Whites	40	6.0	48	0.75	2:45	–
Light colours	40	4.0	70	0.55	1:20	–
Dark	40	4.0	41	0.58	1:44	–
Cotton	95	6.0	55*	1.90	2:00	–
Cotton**	60	6.0	48	0.90	3:30	2:30
Cotton **	60	3.0	35	0.78	2:30	***
Cotton	40	6.0	48	0.70	2:30	2:05
Cotton**	40	3.0	35	0.57	2:05	***
Synthetics	60	3.0	50*	0.90	2:05	1:14
Synthetics	40	3.0	40	0.50	1:50	0:59
Delicates	40	1.5	50	0.55	0:45	–
Wool/Handwash	40	1.0	40	0.55	0:35	–
Jeans	40	5.0	64	0.70	2:43	2:18
SuperEco	60	6.0	55	0.78	4:00	–
Aqua Eco	40	2.5	19	0.45	1:00	–
Speed 15´	30	3.0	30	0.15	0:15	–

Consumption values were measured in normalized conditions in compliance with standard IEC/EN 60 456. Consumption data in the home may vary with respect to the values in the table in relation to the water supply pressure and temperature, the load and the type of wash. Water and energy consumption refer to the default setting of the programmes; selecting special options or modifying spin speed or temperature will change the consumption data.

⏲ The programme duration may differ from the values indicated above as it depends on the operation conditions applicable at that time (see also "Troubleshooting Guide" in your Instructions for Use).

* To reduce the water temperature, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

** Reference programmes for Energy Label.

*** Automatic adaption of programme duration after detection of wash load.

ADD DETERGENTS, CLOSE THE LID AND SELECT THE PROGRAMME

Add detergent as indicated an the front page and as described in the chapter "Detergent and Additives" in your Instructions for Use.

1. Turn the **programme selector** to the desired programme. The display shows the programme duration in hours and minutes as well as the predefined temperature. The **"Start(Pause)"** button flashes.
2. The **temperature** can be altered by pressing the "Temperature" button.
3. The indication lamp of the predefined **spin speed** lights up; in case you want to set another spin speed, press the "Variable spin" button.

SELECT ANY DESIRED OPTION

Push the button(s) of any option(s) desired - the respective indication lights up.
When the combination of programme and additional option(s) is not possible, the indication lights switch off automatically. Unsuitable combinations of options are deselected automatically.

"Clean+" button
- Choose this option if you use an in-wash additive for stain removal (powder, for example "Vanish") - it will optimize the additive's efficiency to get better wash performance and stain removal.
- Choose temperature of 30 or 40°C and use with maximum load.
- Add an appropriate amount of in-wash additive for stain removal (powder) to the main wash chamber, together with your detergent (only use powder detergent with this option). Respect the manufacturer's dosing instructions.
- Prolongs the programme by approx. 10 to 15 minutes.
- Appropriate for use of stain removers and bleaches on oxygen basis. **Chlorine or perborate bleaches must not be used!**

"Rapid" button
- Enables quicker washing by shortening the programme duration.
- Recommendable for small loads or only lightly soiled laundry.

"Prewash" button
- Only for heavily soiled loads (for example sand, granular dirt). Increases the cycle time by approximately 15 min.
- Do not use liquid detergent for the main wash when activating the Prewash option.

"Intensive rinse" button
- More water is added and rinse cycle is prolonged.
- This option is particularly suitable for areas with very soft water, washing baby linen and helping people with allergies.

"Rinse hold" button
- The laundry remains in the last rinse water without progressing to the final spin cycle to avoid creasing and prevent colours from changing.
- It is particularly useful if you want to postpone spinning to a later time, or if you want to drain only.
- If you select "Rinse hold", do not leave items to soak for too long.

Note: The programme stops to "Rinse hold" at the time the "Rinse hold" light in the programme sequence indicator is on. The indication lamp next to the **"Start(Pause)"** button flashes.

Terminate the "Rinse hold" option:
- Press the **"Start(Pause)"** button; the programme will terminate automatically with the final spin cycle for the present wash programme.
- If you do not wish to spin the clothes, turn and hold the **"Reset/Drain"** button for a few seconds to start the Drain programme.

"Variable spin" button
- Every programme has a predefined spin speed.
- Press the button to set another spin speed.
- If spin speed "0" is selected, the final spinning is cancelled but intermediate spin peaks remain during the rinse. The water is drained out only.

START DELAY

The "Start delay" button allows to run the machine at the consumer's convenience, for example at night when electricity is cheaper. Do not use liquid detergent when activating the "Start delay".
- Select programme, temperature and options.
- Press the "Start delay" button to select the delay time up to 23 hours;
- Press the **"Start(Pause)"** button.
  The indication light over the "Start delay" button flashes and the countdown of the delay time begins. The dot between hours and minutes of the delay time indicated flashes.
- The time delay indication disappears when the programme starts and it is replaced by the remaining programme time.
- Once having pressed the **"Start(Pause)"** button, the number of hours preselected can be reduced by pressing and holding the "Start delay" button. From one hour on, the delay time can also be reduced in steps of 10 minutes.

To cancel the "Start delay"

..before you press the "Start(Pause)" button:
- Turn the programme selector to another position or press the **"Reset/Drain"** button.

..after having pressed the "Start(Pause)" button:
- Press **"Start (Pause)**" - the delay time disappears from the display; press **"Start (Pause)"** again to start the selected programme immediately.

PROGRAMME START

Open the tap and press the **"Start(Pause)"** button. The indication lamp next to the **"Start(Pause)"** button lights up. The programme sequence indicator shows the current programme phase, running from left to right through Wash, Rinse, Spin/Drain.
The display shows the remaining programme time. Due to variations in load and temperature of inlet water, the remaining time is newly calculated in certain programme phases. If this is the case, **an animation appears on the time display**.

"DOOR OPEN" INDICATION

Before starting and after end of a programme, the lamp lights to show the the lid can be opened. As long as a wash programme is running, the lid remains locked and must on no account be forced open. In case you have an urgent need to open it during a running programme, refer to "Cancel a running programme before the end".

FAILURE INDICATIONS

In a case of any failures of irregularities, consult the "Troubelshooting Guide" in Instruction for Use.

"Service"
Lighting up of the "Service" indication can be caused by a fault in an electrical component.

"Water tap closed"
The washing machine has no or insufficient water supply; the water tap might be closed or the water inlet hose kinked.

"Clean pump"
Waste water is not pumped out. The drain hose may be kinked or the filter must be cleaned (see "Cleaning the filter" in your Instructions for Use).

PROGRAMME END

- All the lights of the programme sequence indicator are off, and the "Door open" indication lights up.

1. Turn the programme selector to the "Off/O" position.
2. Close the water tap.
3. Open lid and drum and unload the machine.
4. Leave the lid open for some time to allow the interior of the machine to dry.

CHANGE PROGRAMME AND/OR OPTIONS AFTER PROGRAMME START

1. Press the **"Start(Pause)"** button to pause the programme. The light flashes.
2. Select the new programme, temperature, any options and another spin speed if you want.
3. Press the **"Start(Pause)"** button again. The new programme continues at the same position where the previous programme was interrupted. Do not add detergent for this programme.

CANCEL A RUNNING PROGRAMME BEFORE THE END

The **"Reset/Drain"** button cancels a programme before the end.
- Press the **"Reset/Drain"** button for at least 3 seconds. The water is drained out; it may last a while until you can open the lid.

Whirlpool is a registered trademark of Whirlpool USA.

5019 312 11081